

INSTRUCTION MANUALS

SA-270 INTEGRATED STEREO AMPLIFIER

CONTENTS

ACCESSORIES	3
CONTENTS	3
SAFETY PRECAUTIONS	4
IMPORTANT SAFETY INSTRUCTIONS	4
IMPORTANT INFORMATION	7
CONNECTIONS TO THE MAINS	8
REMOTE CONTROL	8
FRONT/REAR PANEL	10
AUDIO CONNECTIONS	11
OPERATION AND FUNCTIONS	12
ON, OFF and Standby	
Selecting the input source	
Using the function menu	
Volume control	
Bass and treble control	
Balance control	
Loudness	
TROUBLESHOOTING	15
TECHNICAL DATA	16

ACCESSORIES

Accessories

- 1 x SA-270 Integrated Amplifier
- 1 x Remote control
- 2 x Batteries (Optional)
- 1 x Operation Manual

This operation manual supplies all the information that you need to have about your System Fidelity Integrated Amplifier. Please read this operation manual carefully before you start using the unit!

SAFETY PRECAUTIONS



A triangle with a lightning symbol draws the user's attention to "dangerous voltage" without insulation in the cabinet which may be high enough to entail a risk of electric shock.



A triangle with an exclamation mark draws the user's attention to important instructions for use and maintenance in the accompanying manual, which should be studied.



A symbol for CLASS II (double insulation)

WARNING:

TO MINIMISE THE RISK OF FIRE OR ELECTRICAL SHOCK, DO NOT EXPOSE THE UNIT TO RAIN OR MOISTURE. DO NOT OPEN THE CABINET AS IT CONTAINS DANGEROUS VOLTAGE. ONLY QUALIFIED TECHNICIANS ARE ALLOWED TO CARRY OUT REPAIR AND SERVICE.

CAUTION:

If the plug of the power cord needs to be replaced, it is important that the replacement is identical to the plug to be replaced, or that the new plug has been recommended by the manufacturer.

TO AVOID ELECTRICAL SHOCK, IT IS IMPORTANT TO INSERT THE PLUG CORRECTLY INTO THE SOCKET.

IMPORTANT SAFETY INSTRUCTIONS

WARNING: IT IS IMPORTANT THAT YOU READ AND OBSERVE BOTH THE INSTRUCTIONS IN THIS MANUAL AND THE INSTRUCTIONS ON THE UNIT. KEEP THIS MANUAL FOR FUTURE REFERENCE .

This unit was designed and manufactured with a view to providing maximum safety for the user. Incorrect use of the unit may cause electrical shock or fire. The protection devices built into this unit will protect the user if the procedures below are observed in connection with installation, use and repair. This unit is fully electronic and contains no parts that can be repaired by the end user .

PLEASE DO NOT REMOVE THE CABINET. RISK OF DANGEROUS VOLTAGE. ONLY QUALIFIED AND AUTHORIZED TECHNICIANS ARE ALLOWED TO REPAIR THE UNIT.

Read the manual upon unpacking the unit

Please read the manual carefully and observe all the instructions given.

Power supply

Only the power supply indicated on the rating plate must be used for this unit.

If you are not sure which power supply you have, please contact the distributor or the local electricity supplier.

Earthing or polarisation

If the plug cannot be inserted properly into the socket, or if the plug does not fit, the unit must not be used in your country.

Ventilation

The cabinet is provided with slots and openings to ensure ventilation and reliable operation and to protect the unit against overheating. Do not block or cover these openings. The openings must never be blocked, for instance by placing the unit on a bed, a sofa, a carpet or similar surface .

Heat

Do not place the unit near sources of heat such as radiators, heat registers, ovens or other units that produce heat.

Water and moisture

The unit must not be placed close to water, such as bathtub, wash basin, kitchen sink or laundry tub, in a damp cellar or close to a swimming pools, etc.

Cleaning

Unplug the unit before cleaning. Do not use liquid detergents and aerosol cleaning agents. Please use only a dry cloth for cleaning the unit.

Power cords

Wiring must be organised to prevent people from stepping on the cables and to avoid pinching by objects placed on or beside them. Take special care around sockets and plug boxes and where the power cords leave the unit.

Overloading

Make sure that wall sockets, extension cords and plug boxes are not overloaded as this may lead to fire or electrical shock.

Lightning

Unplug the unit for additional protection during thunderstorms or when the unit is not used for prolonged periods. This will prevent damage to the unit from lightning and power surges.

Penetration of objects and liquid

Never push any foreign objects through the openings into the unit, as they may touch dangerous voltage points or short-circuit parts and thus cause fire or electric shock. Do not allow any liquid to be spilled on or into the unit.

Accessories

Do not place the unit on unstable surfaces such as a trolley, stand, tripod, shelf or table. The unit may fall and injure children or adults or be seriously damaged. Use only trolley, stand, tripod, shelf or table that is very stable or provided with the unit. The unit must be installed in accordance with the manufacturers instructions and by means of installation equipment recommended by the manufacturer.

If the unit is placed on a trolley, the trolley must be moved very carefully. Sudden stops, unnecessary force and uneven surfaces may cause the trolley to turn over.

Loads

Do not place heavy loads on the unit and do not step on it. The load may fall and cause serious injury to persons or damage to the unit.

Damage

Unplug the unit and contact qualified technicians in the following cases:

- A) If the power cord or the plug is damaged.
- B) If liquid has been spilled on the unit or objects have fallen into the unit.
- C) If the unit has been exposed to rain or water.
- D) If the unit does not work properly after adhering to the instructions in the operation manual. Only the settings described in the operation manual

must be made as incorrect setting may result in damage and often will make it difficult for a qualified technician to make the unit work properly again.

E) If the unit has been dropped or damaged in any other way.

F) When the operation of the unit changes drastically, the unit requires service.

Service


Do not attempt to carry out any service work yourself. By opening or removing the cabinet, you will be exposed to dangerous voltage or other hazards. Any service work should be carried out by qualified technicians.

Spare parts

If spare parts are required, make sure that the service technician uses spare parts specified by the manufacturer or spare parts with the same characteristics as the original. Unauthorised spare parts may cause fire, electrical shock, etc.

Safety check

After service or repairs on the unit, ask the service technician to carry out a safety check to ensure that the unit is ready for use.

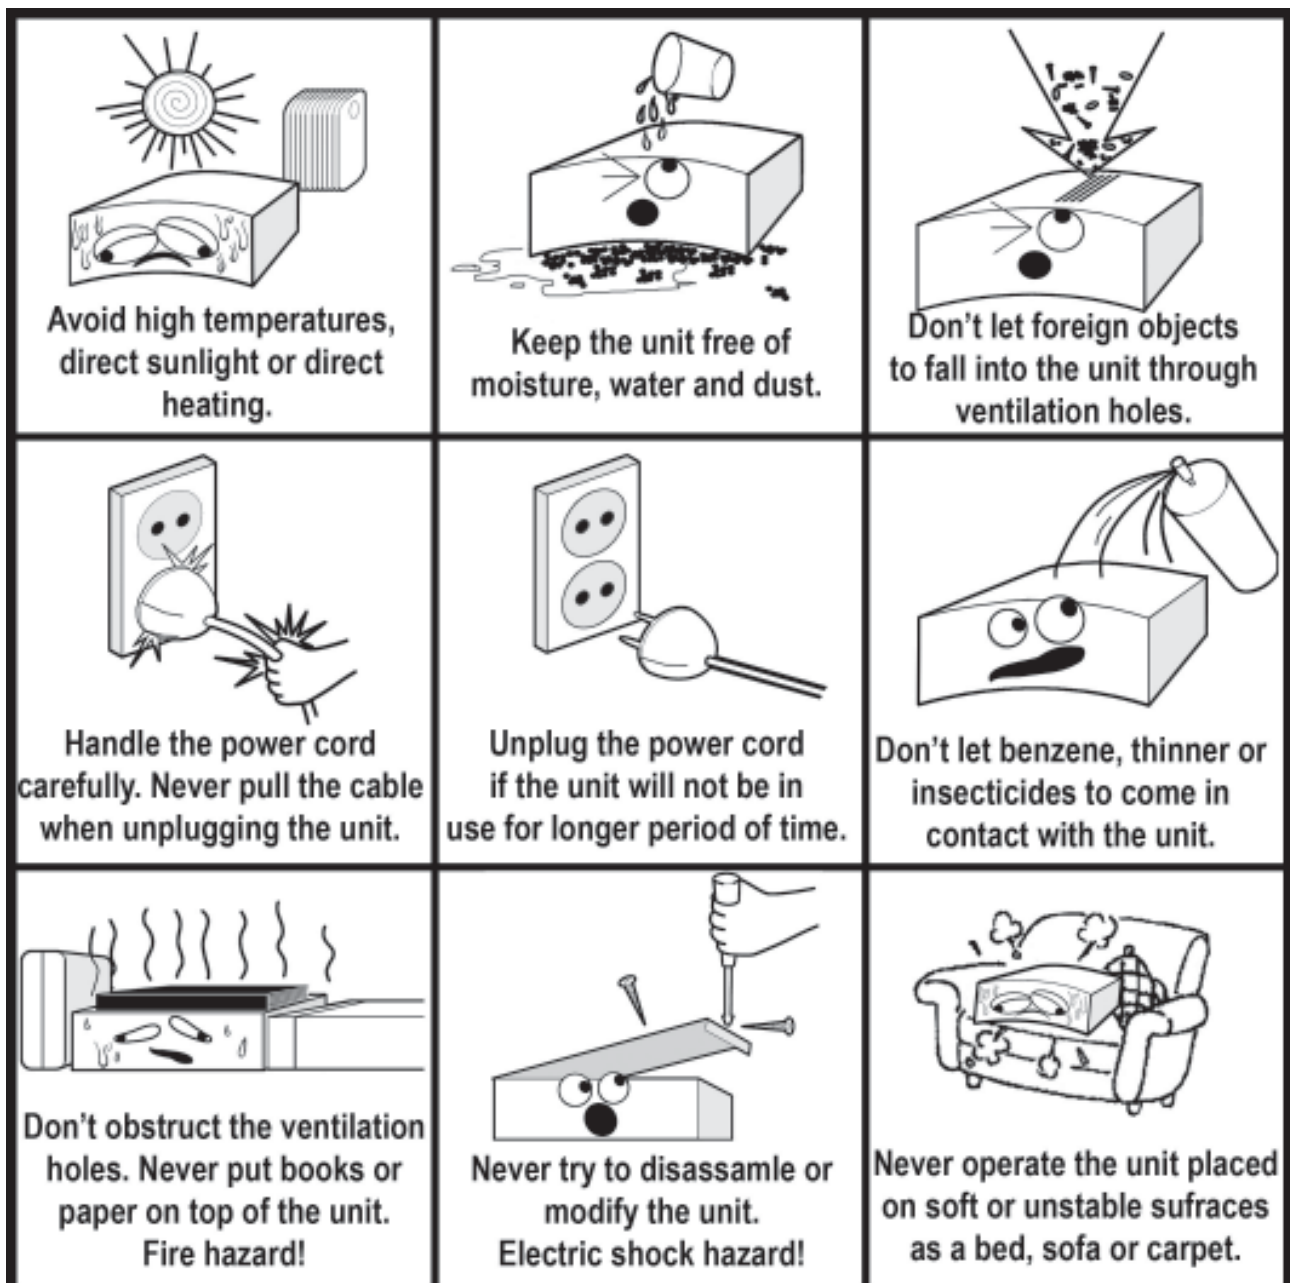

IMPORTANT INFORMATION

Handling instructions

The top and back panel of the unit may become warm after prolonged use. This is not due to a defect.

Turn off the power when the unit is not used.

Protect the power cord

Follow the instructions below to prevent abnormal operation, electrical shock, fire or personal injury: Hold the plug firmly when inserting it into the socket.

Avoid heat-producing devices.

Do not place objects on the power cord.

Do not carry out service work on or change the power cord.

Positioning

Do not place the unit in any of the following places:

- In sunlight, close to heat-producing devices or in an enclosed rack;
- In places with high temperatures (40C or more) or high relative humidity (90% or more);
- In dirty or dusty places as some internal parts may be damaged.

Please do not put your fingers or any other objects into the unit

Touching the internal parts is dangerous and may cause injury or damage. Do not open the cabinet. Do not place any foreign matter in the unit.

Interference

Placing the amplifier near a television set, radio or video player may cause poor picture and sound quality. In that case, move the amplifier further away from the television set, radio or video player.

Condensation

Condensation may occur in the following cases:

When the amplifier is moved directly from a cold to a warm place.

When the amplifier is used in a room where the radiator has just been switched on or a place where the cold air from the air-conditioning system is directed at the unit.

If the amplifier is used in the summer in a warm and humid room just after it has been moved from an air-conditioned room.

If there is steam or a high level of humidity in the room.

In case of condensation, the amplifier will not work properly. Turn off the unit. Unplug the unit and leave it for 2-3 hours. The amplifier will then have adapted to the environment and any condensation will have disappeared.

NOTES ON INSTALLATION

Your System Fidelity SA-270 should be placed on a firm, level surface. Avoid placing it in direct sunlight or near sources of heat and damp. Always allow adequate ventilation and don't place it on a soft surface like a carpet. Don't place it in an enclosed position such a bookcase or cabinet that may impede the air-flow through the ventilation holes. The unit shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the unit.

About connection to the mains

Do not turn on the power before all connections have been made correctly.

Check that all connections have been made correctly before turning on the power.

Check that the mains voltage is 230-240V AC50Hz before turning on the power.

Check that all other connections have been made correctly before inserting the mains plug into the wall socket.

Then insert the plug into a suitable socket.

If the unit is to be used abroad, you may need an adapter.

REMOTE CONTROL

 
Installation of batteries

Remove the cover at the back.


Position two batteries of the type AAA/R03/UM4 in the battery compartment. Make sure that the orientation and polarity of the batteries is correct (see drawing).

Do not mix new and old batteries and do not use different types of batteries.

If the remote control is not used for prolonged periods, remove the batteries from the remote control to avoid corrosion.

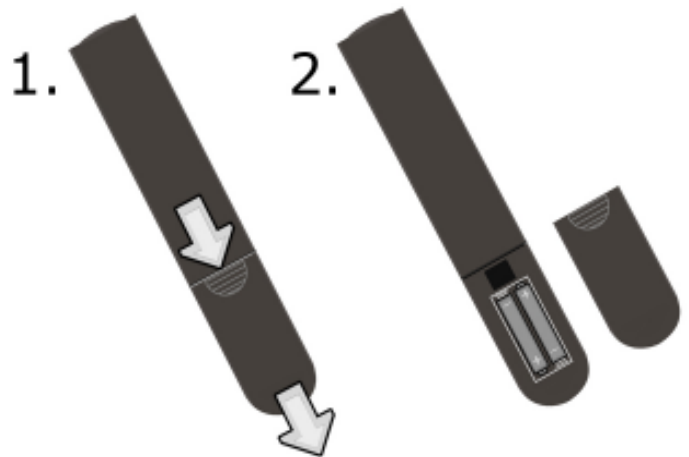

Using the remote control

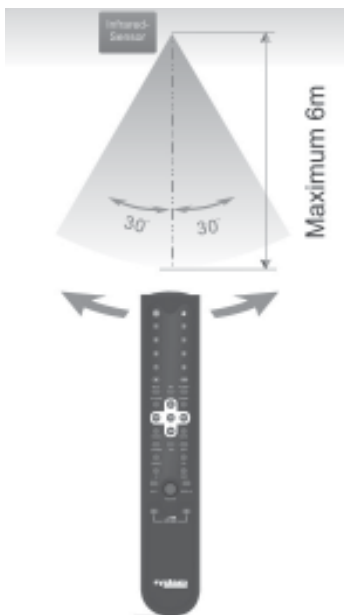 

Direct the remote control at the sensor on the front panel of the amplifier. When the remote control signal is received, the unit reacts accordingly. The remote control works within a range of 6m.

Sometimes the remote control may not work well in direct strong light. You may have to move the amplifier if it is a problem.

 
Malfunction may occur if remote controls of some other equipments are used near the amplifier.

Do not place any objects on the remote control, as the batteries may become flat if a key is depressed constantly.

Make sure that there are no obstacles between remote control and amplifier.

Do not position the amplifier behind tinted glass as it may reduce the maximum range of the remote control.

Remote control functions

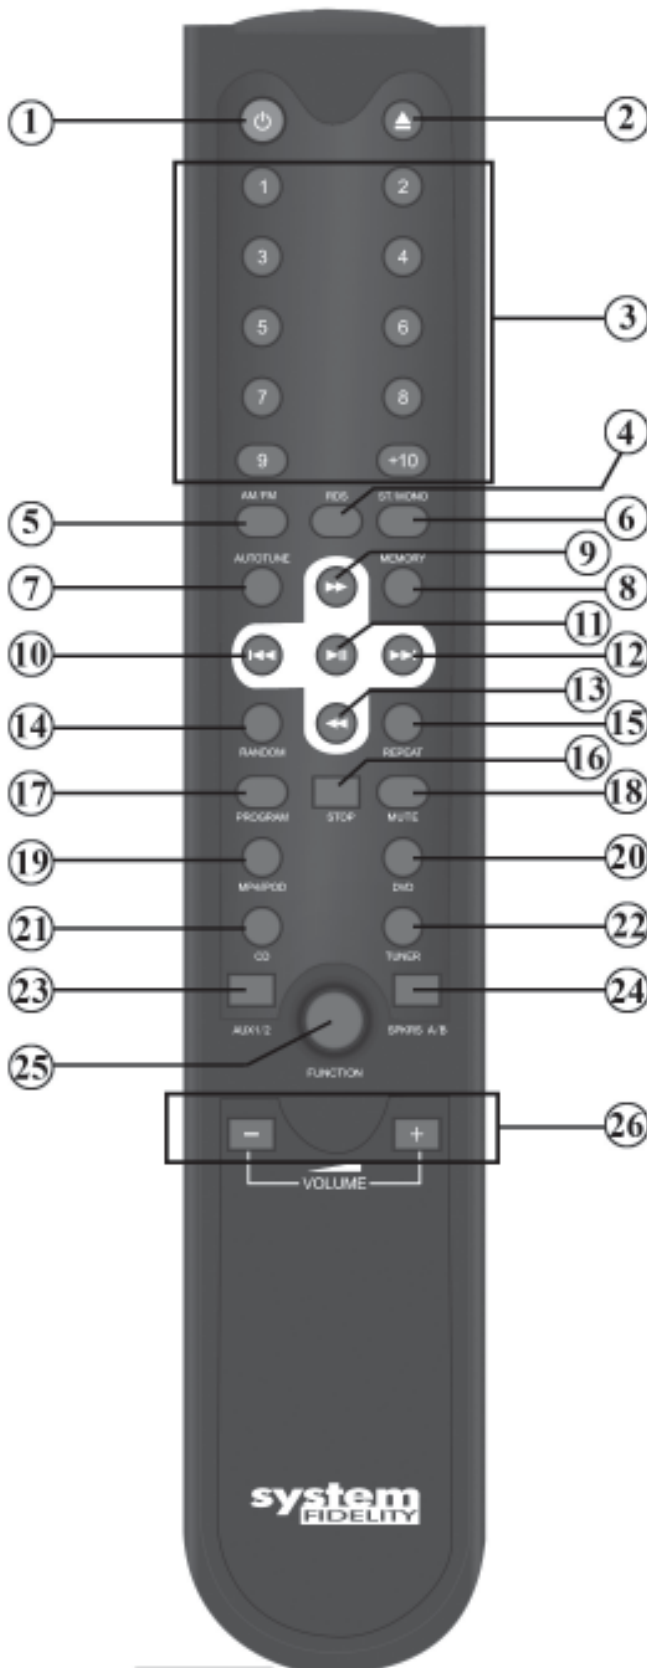

SA-270 AMPLIFIER FUNCTIONS:

- (1) Power: Sets the SA-270 in standby mode.
- (19-23) Input buttons: Selects input source of amplifier.
- (24) SPKRS A/B: selects which pair of speakers are playing - press once for SPEAKERS A, press one more time for SPEAKERS B, press third time for SPEAKERS A+B
- (25) Function: Adjusts treble/bass level, loudness and balance by means of VOL + and -
- (26) Volume +/-: Adjusts the master volume.

Some of the amplifier functions can only be performed by means of the remote control. Some functions are connected with the selected signal input source. Some buttons on the remote control may therefore not be available if the corresponding signal input source has not been selected.

 
ST-270 AM/FM TUNER FUNCTIONS:

- (1) Power: Sets the ST-270 in standby mode.
- (3) 1-10 : Selects stored stations. If depressed for more than two seconds, a station is stored under the number concerned.
- (4) RDS: Displays RDS and other information.
- (5) AM/FM: press to choose between AM or FM mode
- (6) ST/MONO: press to choose between stereo or mono reception (in case of very weak signal, mono can offer better sound without noise.
- (7) Autotune: Press once to automatic tune in to AM/FM stations. Depress button for two seconds to initiate an automatic search. At FM, the autotune function will search for a station at a higher frequency.
- (8) MEMORY: press to store the tuned station

CD-270 CD-PLAYER FUNCTIONS:


- (1) Power: Sets the CD-270 in standby mode
- (2) Eject: Opens the CD tray
- (3) 1-10 : Selects desired track for playback
- (11) PLAY/PAUSE: press once for playback. If press during play, the disc is paused. Press one more time for resume play.
- (10) SKIP (I◀◀): Selects the previous track
- (12) SKIP (▶▶I): Selects the next track
- (9) SEARCH (▶▶): Search forward
- (13) SEARCH (◀◀): Search back
- (14)Random: All tracks are played in random order
- (15) Repeat: Repeats a single track or all tracks on a CD
- (16) Stop: Stops playback
- (17) Program: Allows playback of the music tracks on a CD in a certain order

FRONT PANEL DESCRIPTION

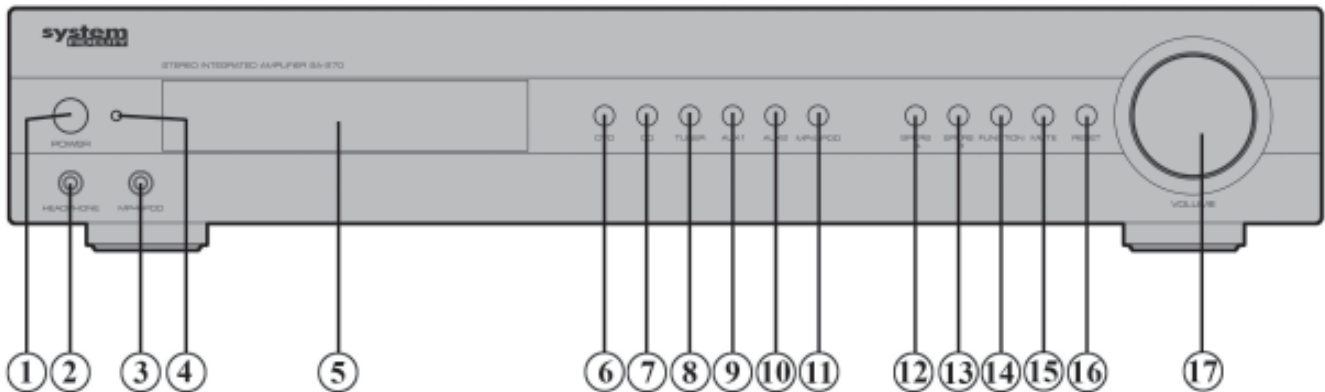


- (1) **Mains switch:** Used to switch on and off the unit by switching the mains voltage.
- (2) **Headphone output jack:** 3,5-mm jack that suits most headphones.
- (3) **MP4/iPod input:** 3,5mm jack for connection of iPod or MP3 and MP4 player.
- (4) **LED indicator:** Lights blue indicating that the amplifier is on stand-by mode. Switched off when the amplifier is in operation and VFD display is lit.
- (5) **Vacuum Tube Display (VFD):** main display displaying most of the function performed.
- (6) **DVD:** Activates the DVD input.
- (7) **CD:** Activates the CD input.
- (8) **Tuner:** Activates the Tuner input.
- (9) **AUX1:** Activates the AUX 1 input.
- (10) **AUX2:** Activates the AUX 2 input.
- (11) **MP4/iPod:** Activates the MP4/iPod line input
- (12) **Speakers A:** Activates the main speaker pair output (A)
- (13) **Speakers B:** Activates the secondary speaker pair output (B)
- (14) **Function:** Gives the user access to the adjustment of the features as Balance, Bass, Treble and Loudness.
- (15) **Mute:** switching the mute button mutes the sound loudness for -20dB.
- (16) **Reset:** gives the user the possibility to reset all adjustments to a factory default
- (17) **Volume knob:** by turning the knob sound volume increases or decreases

 REAR PANEL DESCRIPTION

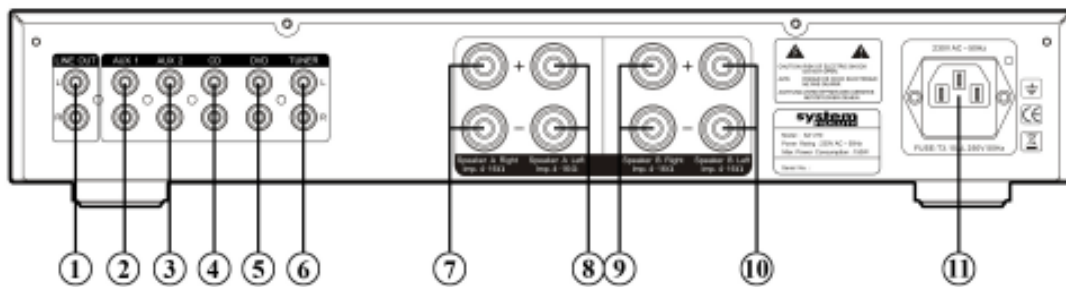

- (1) Line Out** - RCA cynch output for connection of additional power amplifier, active subwoofer or recording device
- (2) AUX1:** RCA cynch input for connection of optional equipment.
- (3) AUX2:** RCA cynch input for connection of optional equipment
- (4) CD:** RCA cynch input for connection of CD player
- (5) DVD:** RCA cynch input for connection of DVD player (Note: Analogue stereo input only).
- (6) Tuner:** RCA cynch input for connection of FM/AM radio.
- (7-8) Speakers A left & right:** For connection of main loudspeaker pair
- (9-10) Speakers B left & right:** For connection of additional loudspeaker pair
- (11) AC input:** For connection of mains voltage. Make sure that the plug is correctly inserted, and that the voltage corresponds to the text printed on the cabinet back panel.

 CONNECTIONS

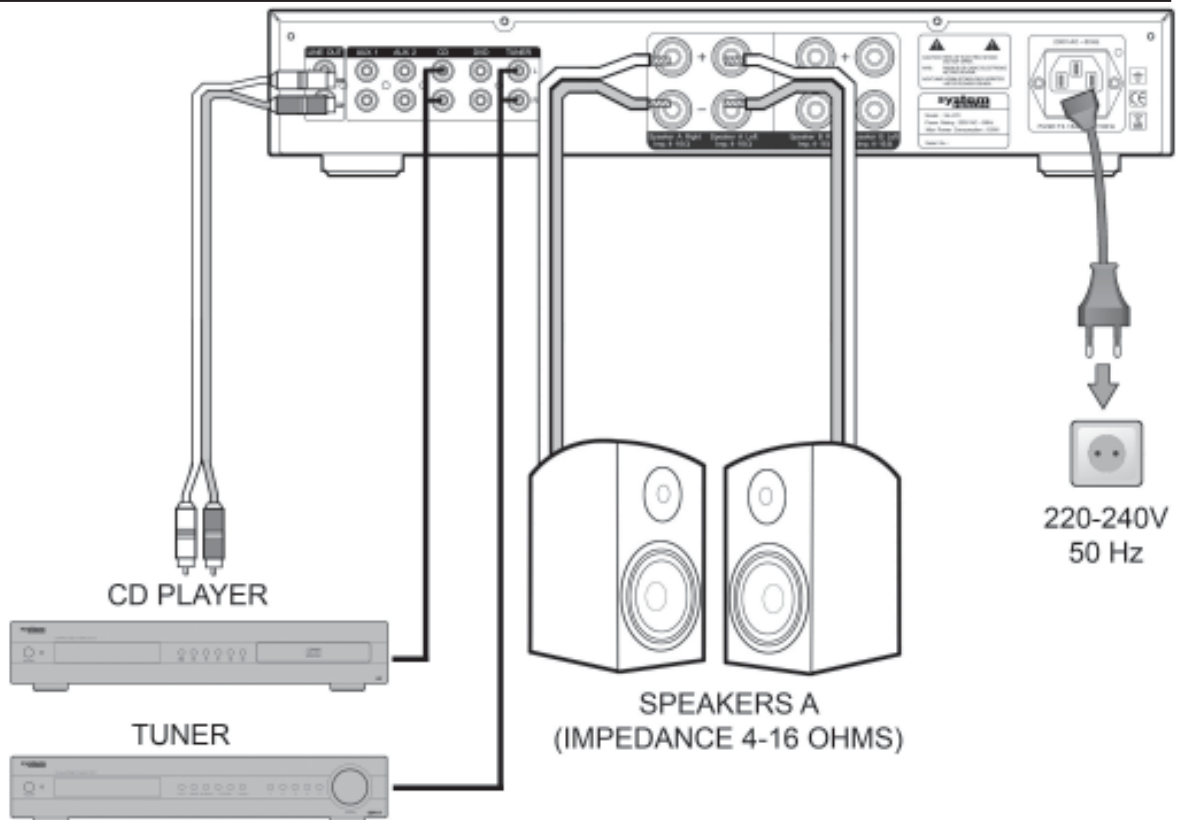

Notes:

- The speaker impedance must be between 4 and 16 Ohm. If two speaker pairs are connected and run simultaneously (A+B), the impedance of the speakers must be minimum 6-8 ohms.
- For optimal sound quality there must be a proper and firm connection between the speaker terminals and the amplifier terminals. Ensure that all cables and sockets are not damaged in any way and all sockets are firmly pushed home.
- The cable ends must not be frayed to avoid that they come into contact with each other or the cabinet back panel. Be sure to connect the polarities of the speaker system and the speaker terminals correctly (+ to +, - to -).
- When make the connection, please refer to the connection diagram. Make sure that all the units are switched off during any connection. The RCA sockets on your SA-250 are color coded for your convenience. Red and white are RIGHT and LEFT audio respectively. Use high quality RCA-interconnect and speaker cables for optimum performance and reliability.

OPERATION AND FUNCTIONS

Quick start

1. Connect the speakers to the speaker terminals and sources to the relevant terminals and rear input sockets on the back panel of the unit.
2. Plug in the AC power cord.
3. Press the POWER switch on the front panel of the unit to turn on the amplifier.
4. Press the required input selector. And enjoy.

On, Off and standby

1. Turn on the amplifier by pressing the mains switch.
2. Press the standby button on the remote control to switch to standby mode. The display will turn off and all functions will be reduced to a minimum to make sure that the amplifier uses minimal power. When in standby mode the unit only reacts to the standby button of the remote control.
3. If you wish to turn off the unit to avoid any power consumption, you must press the mains switch.

Protect the environment and turn off the unit after use.

Selecting the input source

Turn on the SA-270.

Now you can call the input source that is active at the moment. Select Tuner to listen to the radio, CD to listen to a CD, DVD, Phono, MP4/iPod, AUX1 or AUX2 if units have been connected to these inputs.

If you do not know which input has been selected, the VFD display will clearly indicate it.

Press the Phono, DVD, CD, Tuner, MP4/iPod, AUX 1 or AUX 2 button either on the remote control or on the front panel to select the corresponding input.

Note: *All inputs are analogue stereo inputs. It means that you cannot connect a digital sound source through a digital cable (optical or coaxial).*

Using the function menu

The SA-270 features a "function menu" that allows adjustment of the following: Master volume, bass, treble, balance and loudness.

Volume control

Turn the volume control knob to the right to increase the volume and turn the volume control to the left to reduce the volume.

The volume control on the front panel can be turned both clockwise and anticlockwise to change the volume. The volume control includes 64 steps, from -78,75 dB for minimum volume and up to 0 dB for maximum volume.

When the volume control is operated, the first line of the display will switch from information on input source to information on volume. When the volume control is no longer operated, information on input source will be displayed again after five seconds.

Note: *dB is a professional term for indicating the amplitude of an audio signal where 0 dB is the maximum output. You will see that the LCD display of the unit indicates - dB up to 0 dB which is the maximum volume.*

Bass control

This amplifier features bass control that allows adjustment of the bass level by +/- 14 dB, from 45Hz to 259Hz.

1. Press the FUNCTION button on the remote control or on the front panel until information on bass adjustment is displayed to activate the bass tone control.
2. Press VOL+ and VOL- to adjust the bass level.
3. Then turn the volume control to adjust the bass level.

Note: *If the bass control is not operated within five seconds, the display will return to the volume information display.*

Treble control

This amplifier features treble control that allows adjustment of the treble level by +/- 14 dB, from 2KHz to 20KHz.

1. Press the FUNCTION button on the remote control or on the front panel until information on treble adjustment is displayed to activate the treble tone control.
2. Press VOL+ and VOL- to adjust the treble level.
3. Then turn the volume control to adjust the treble level.

Note:
If the treble control is not operated within five seconds, the display will return to the volume information display.

Please note that the high bass or treble boost level offered by the bass/treble control may lead to permanent damage to your loudspeakers if the high setting is used for prolonged periods

Balance control

This amplifier features balance control that allows adjustment of the volume of one loudspeaker at a time by +/- 38,75 dB, divided into 32 steps.

This function is used to compensate for a non-centred listening position, and makes it possible to get back the correct stereo perspective.

- Press the FUNCTION button on the front panel or remote control until information on balance control is displayed.
- Turn the volume control to adjust balance.

Note:
If the balance control is not operated within five seconds, the display will return to the volume information display.

Loudness

This amplifier features a loudness function that allows boosting of the volume of the low frequencies at low volume.

This function is active at frequencies between 20Hz and 800Hz, and the function is automatically dampened when the amplifier volume is increased. When the volume is at the maximum setting, the loudness function is completely cut out.

- Press the FUNCTION button on the front panel or remote control until information on loudness is displayed
- Turn the volume control to the right to activate the loudness function and to the left to deactivate the loudness function.

Note:
If the loudness function is not operated within five seconds, the display will return to the volume information display.

TROUBLESHOOTING

PROBLEM	CAUSE/REMEDY
No power when the amplifier is turned on.	<ul style="list-style-type: none"> -Switch on the electric current at the socket. -Check that the plug has been correctly inserted into the socket. -The internal fuse has blown and must be replaced by a qualified service technician. -The power cord has been damaged and must be replaced
No sound.	<ul style="list-style-type: none"> -The amplifier has not been turned on from stand-by mode. -The volume control is set at a minimum -The speaker cables have not been correctly connected. -A wrong input source has been selected. -No input source has been connected.
There is sound in one channel only.	<ul style="list-style-type: none"> -The balance control is not correctly adjusted -The audio input cables have been incorrectly connected or damaged. -The input source is defective. -The speaker cables have been incorrectly connected or damaged. -The speakers are defective.
<p>High buzzing.</p> <p>Weak bass and poor stereo perspective</p>	<ul style="list-style-type: none"> -The audio input cables have been incorrectly connected or damaged. -The ground cable for the record player has not been connected. -The record player pick-up is defective. -The speaker connection is out of phase. Check that the positive and negative poles have been correctly connected, both at the back of the amplifier and at the back of the speaker.
Distortion of sound.	<ul style="list-style-type: none"> -Some of the conductor wires of the speaker cable are in contact with each other which causes distortion. -Bass and treble controls are set too high in relation to speaker specifications. -The volume is set too high. -The amplifier is defective and should be serviced by a qualified technician.
The LCD display does not display any information.	<ul style="list-style-type: none"> -The amplifier is defective and should be serviced by a qualified authorized service.
_ERROR 1 _ is displayed on the LCD display	<ul style="list-style-type: none"> - The amplifier is defective and should be serviced by a qualified authorized service.
The unit does not switch between inputs	<ul style="list-style-type: none"> -The amplifier is defective and should be serviced by a qualified authorized service.

TECHNICAL DATA

Output power		2x70 Watt at 4 Ohm 2x50 Watt at 8 Ohm
Frequency response		10Hz to 63KHz (-3dB)
Distortion		<0.05%
Signal-to-noise ratio		>90dB
Phono input		
Input impedance		47 KOhm
Input sensitivity		3.8mV
Line level inputs (Tuner, CD, DVD, AUX1, AUX2)		
Input impedance		47 Kohm
Input sensitivity		200mV
Line level outputs		
Output impedance	Line out Headphones	100KOhm 300Ohm
Maximum output level	Line out Headphones	740mV 1.25V
Tone control		
Treble		+/- 14dB
Bass		+/- 14dB
Voltage and power consumption		See back panel
Dimensions (WxDxH)		430 x 290 x 75mm
Weight		5.3Kg

We reserve the right to change the technical data and the design of the product without notice as a result of further development.

CONSUMER NOTICE:

The System Fidelity product you have purchased is subject to Directive 2002/96/EC of the European Parliament and the Council of the European Union on waste electrical and electronic equipment (WEEE) and, in jurisdictions adopting that Directive, is marked as being put on the market after August 13, 2005, and should not be disposed of as unsorted municipal waste. Please utilize your local WEEE collection facilities in the disposition of this product and otherwise observe all applicable requirements.



system
FIDELITY

For further informations please visit our web site:

www.systemfidelity.com